



AROMA DIVINO™
OIL & DIFFUSERS

Congratulations on your purchase of the Aroma Divino™ Prometheus essential oil diffuser. Please read all the instructions carefully before using your diffuser.

IMPORTANT WARNINGS AND SAFETY INFORMATION. READ COMPLETELY BEFORE USING

Oils are flammable. Do not expose oils to flame.

Do not ingest oil or use for aromatherapy. Handle oils carefully. Do not get in eyes or prolonged exposure to skin.

Do not disassemble the unit. There are no user serviceable parts. Unit should be disposed of when unit reaches the end of its useful life.

Do not expose to or use near water.

Do not use if cord has been frayed or damaged. Use only cords provided with the unit.

Do not overload power supplies or outlets.

Do not move the unit when containing oil or operating.

Do not use fragrant oils if allergic to essential oils, perfumes or other scents or suffer from asthmatic conditions.

Diffuser oils are highly concentrated solutions. Set your diffuser to the lowest setting and move up from there. Your sense of smell becomes accustomed to a scent after time. Before adjusting scent intensity upward, leave the room for 5-10 minutes and return. Setting your levels too high for the room size could cause headaches. In such a case, seek fresh air and lower your settings.

Oils may damage finished wood and plastic surfaces.

Clean your diffuser each time you replace the oil or at least every 30 days. Follow the cleaning instructions below.

Use only approved oils.

Diffuser Instructions:

Setting the Current Time

1. To set the current time, press SET and the hour will flash. Press UP or DOWN to adjust to the current hour (in military time) and press set to confirm your choice
2. Press SET The minutes will now be flashing. Press UP or DOWN to adjust to the current minute.
3. Press SET for a 3rd time to adjust the day of the week; now the day of the week will be flashing. Press UP or DOWN to adjust the arrow (or triangle symbol) to point at the current day of the week.
4. Press SET for a 4th time to make sure Volume 500; if you are receiving 500mL bottles of oil. 800 if you are filling the entire bottle that comes with the diffuser.
5. Press SET for a 5th time to adjust your Level (the amount oil in the bottle) to 500 when filling your new bottle of oil. 800 if you are filling the entire bottle that comes with the diffuser.
6. Press SET for a 6th time to be sure your Milliliters is 1.0mL/hr

Setting the Operating Hours

Now it's time to set your event operating periods. The diffuser you have allows up to five individual event operating periods so you can scent at various times on different days of the week.

To set the start time of an operating period:

1. Press MODE. EVENT 1 ON will appear. This represents the On Time for the first working period. Press SET and the hour will flash. Press UP or DOWN to adjust. Then press SET again for the minutes to flash, press UP or DOWN to adjust the minutes.

To set the operating days:

1. Press SET for a 3rd time, then UP or DOWN to each day of the week. The day of the week will begin to flash while going through each day of the week you desire to have the settings adjust to.
2. While going through each day of the week, you will then press the (POWER) *button to select whether you wish to have that day of the week for this event. Example: if you wish to have Mon – Fri for EVENT 1; you will go through each day of the week to be sure an arrow (or triangle symbol) is displayed through only those days. To Remove the symbol, select the day of the week you wish to remove and then press the (POWER) *button again to make the symbol disappear (deactivate) on that day.

To set the end time of the operating period:

1. Press MODE. EVENT 1 OFF will appear. This represents the Off Time for the first operating period. Press UP or DOWN to adjust the hour, press SET to confirm.

Ensure there are no conflicting settings.

**The unit cannot be set to run past midnight. You must split the setting between two different working periods.*

For example: i. EVENT 1 ON — 22:00 EVENT 1 OFF — 23:59 ii. EVENT 2 ON — 00:01 EVENT 2 OFF — 04:00 = on 11pm – off 4am within 2 events

How to Adjust the Scent Intensity

The unit will run for a set period of time, then pause for a set period of time repeating that cycle

during the set schedule. We recommend setting the unit at the lowest level and increasing it as needed. Finding the optimal level is a matter of science and preference coupled with the size of the area being scented. Trial and error will be necessary.

1. Press MODE after your time sequence (for a 3rd time after Event 1 On & Off has been adjusted), the display will show SCENT WORK. This is where you will adjust the scent intensity for the EVENT. This is the amount of time the unit will scent before pausing. We recommend setting this at 5 seconds (the lowest) to start and move up from there.
2. Press MODE again to adjust the pause time. We recommend 300 seconds (the maximum) and move down from there.

If the scent is initially too weak, then increase the run time and /or decrease the pause time. Conversely, if the scent is too strong, decrease the run time and/or increase the pause time.

Filling the Diffuser:

1. Unlock the atomization head by using the key
2. Remove the atomization head
3. Rotate the oil bottle in a clockwise direction and remove it from the atomization head, fill the oil bottle and reattach to the atomization head.
4. Insert the atomization head and lock it.

Refilling the Diffuser:

The unit does not know that you have refilled the bottle and cannot be updated through the app. So, you will need to program the unit each time a bottle is changed.

1. Once you refill the bottle after you have cleaned your diffuser with rubbing alcohol, be sure all parts are still connected properly and put back in place.
2. You will then press the SET button 5x's until you see LEVEL.
3. If your Level is at 0, you will press down 1 time. It will instantly jump back to correct fill size of the bottle, letting the diffuser know it has been filled. The color displayed should turn from Red to Green as well.
4. Press SET on the diffuser 2x's until the current display is showing once again.

Cleaning the Diffuser:

Every time that you change/add oil or every month, empty your diffuser of all oil, fill you bottle about 1/3 with 95% isopropyl rubbing alcohol and run your diffuser for 15 minutes continuously. After cleaning, empty and dispose of the used rubbing alcohol and refill your unit as normal.

To connect to the ScentArea App:

There are two options for the application: AP Mode & Wi-Fi Mode.

- AP Mode – this will create a Wi-Fi signal from the diffuser that will appear in the Wi-Fi settings of your phone which you will connect to with the password: 1 2 3 4 5 6 7 8. Once connected you will then go through this choice through the app and program your settings. You will have to be within 10ft (3 meters) of the diffuser for this option to work. This option you can only program one diffuser at a time.
- Wifi Mode – this option will connect to your desired Wi-Fi (whether it's at home, work or a location you do not plan moving your unit out from). You would need to know your Wi-Fi password to proceed in this matter. This option you would be able to connect to anywhere in the world if you like to travel and want to control it – but must be near the unit to set it up first. With this option, you can connect to multiple units at a time.

AP Mode:

1. Make sure you are next to your unit and can download the ScentArea app with an updated cellphone.
2. Open the app, click through the questions – be sure you allow to use location while using the app and to use local network as well.
3. Click on AP mode; it will state to Please Connect & Configure to Wi-Fi (verbiage may differ between iPhone and Android users)
4. Once you saw the prompt, you will then press and hold the UP button on the diffuser until it beeps/clicks about 5x's, then let go of the button.
5. Go to the Wi-Fi settings of your phone (not the Wi-Fi in the ScentArea app, your actual settings in your phone) and look for a new Wi-Fi network. This may vary by unit and could be: **M50_AliOs** with a series of numbers and letters that follow.
6. Once you click on the Wi-Fi option that starts with **M50**, it will ask for a password which is: 1 2 3 4 5 6 7 8
7. Be sure you are connected to this Wi-Fi before you exit the settings app within your phone. It may say if you would like to stay connected without internet, you accept.
8. Once fully connected, you will then go back to the ScentArea app in your phone and click on AP Mode once more.
9. Once the app loads, a new screen will appear, and you should see the following options:
 - a. Running state: turns on and off the unit
 - b. Fan: do NOT switch off, always leave on
 - c. Device Lock: locks the buttons on your diffuser from responding by touch
 - d. Working Mode: this is the option you select when you are ready to program your unit
10. When you are ready to program your unit, press the Working mode option and your will see 5 options; which we call either Events, Mode or Models
 - a. Click on the green/teal colored circle for Mode1 (or the name that appears for you) to open another window display for you to program your first set time for your diffuser.
 - b. When the window appears, you should see the abbreviated days of the week in one row. If they all are highlighted in the green/teal color, that means it will scent/mist all days of the week for the time you will program.
 - c. Underneath the days of the week, you would see two sets of hours and minutes. This represents the time it will turn on the unit to mist and the time it should stop misting. This again runs on a 24hr time frame. **For example:** if you wish to have it mist from 12 - 3:15pm; the first time is 12:00 while the second time would be 15:15.
 - d. Once you have established a time, you will then adjust the running time and pause time. This can run from a 5 second interval to 300 seconds. We recommend as the lowest running time as 15 seconds; this will allow enough time for the diffuser to pull the oil, atomize it and create a mist. (We have a recommended chart if you are unsure what time to set)

- e. Last, to save your setting – you will press the check mark above the **SUN** (Sunday abbreviation) to save this setting
11. You will repeat these steps if you wish to have multiple times you want your diffuser to mist.

Wifi Mode:

1. Make sure you are next to your unit and can download the ScentArea app with an updated cellphone.
2. Open the app, click through the questions – be sure you allow to use location while using the app and to use local network as well.
3. Click on **Wifi mode**; it will state to log in. You will register your phone number (free sign-up if this is the option you see).
4. Once you click to register, a new window will appear, and you must type in your cell number to receive a SMS code. *Keep in mind to change the country code to the correct country for your phone number.*
5. When you receive the country code, type in the code underneath your phone number and hit NEXT (it may appear as another name depending on iPhone or Android you have)
6. A new screen will appear to create a password – this password needs to have letters and numbers, minimum of 6 characters (hit next once you have created a password you will remember)
7. The new screen will appear to either scan or Add Equipment – you will press **Add Equipment**
8. This will go to a screen where you will see that you are connected to **YOUR** Wi-Fi and asks for you to enter that password (please be sure you know your password).
9. Type out the password -> then press and HOLD the MODE button on your diffuser until you hear it beep about 4x's (let go) -> once you hear it beep, press START CONFIGUREGATION on the app.
**This step may have to be repeated if the password was typed incorrectly or you did not press the mode button in time.*
10. It takes about a full minute to connect, and you should see a prompt that appears and says connection successful (it may differ depending on the iPhone and/or Android)
11. You will then hit the back button to where you saw Scan or Add Equipment. Underneath those option, **Device01** should appear as an option now – click on that option.
12. Once you click on **Device01**, a new screen will appear, and you should see the following options:
 - a. Running state: turns on and off the unit
 - b. Fan: do NOT switch off, always leave on
 - c. Device Lock: locks the buttons on your diffuser from responding by touch
 - d. Working Mode: this is the option you select when you are ready to program your unit
13. When you are ready to program your unit, press the Working mode option and your will see 5 options; which we call either Events, Mode or Models
 - a. Click on the green/teal colored circle for Mode1(or the name that appears for you) to open another window display for you to program your first set time for your diffuser.
 - b. When the window appears, you should see the abbreviated days of the week in one row. If they all are highlighted in the green/teal color, that means it will scent/mist all days of the week for the time you will program.
 - c. Underneath the days of the week, you would see two sets of hours and minutes. This represents the time it will turn on the unit to mist and the time it should stop misting.

This again runs on a 24hr time frame. **For example:** if you wish to have it mist from 12 - 3:15pm; the first time is 12:00 while the second time would be 15:15.

- d. Once you have established a time, you will then adjust the running time and pause time. This can run from a 5 second interval to 300 seconds. We recommend as the lowest running time as 15 seconds; this will allow enough time for the diffuser to pull the oil, atomize it and create a mist. (We have a recommended chart if you are unsure what time to set)
 - e. Last, to save your setting – you will press the check mark above the **SUN** (Sunday abbreviation) to save this setting
14. You will repeat these steps if you wish to have multiple times you want your diffuser to mist.
 15. If you wish to add another diffuser, you will have to add equipment, follow steps 7-14 if this applies to you.

Note – *If your unit is not responding to your touch display, press and hold **SET** for 10 seconds until you hear it beep once and let go. It will unlock – to lock it, you will press and hold down **SET** again for 10 seconds.*


*If you are not sure if you did your settings correctly and want to revert back to factory settings – press and hold **MODE** down for 10 seconds until you hear it beep 4x's and then let go. The factory settings are Monday – Sunday from 8am to 22:00 (10pm) work 005, pause 160.*

Connecting to HVAC

1. Remove the silver nozzle at the top of the unit by unscrewing it counterclockwise.
2. Replace it with the External HVAC Connector Nozzle (black part facing up) and screw it in clockwise and make sure it is tightly secured.
3. Using a screwdriver, make a scent point (a small hole) in the duct work that is between 0.5-1.5 feet after the air handler. The diameter of the scent point should be the same as the clear tube that was included.
4. Insert one end of the clear tube into the External HVAC Connector Nozzle and the other end into the duct work. Be sure to cut any excess tubing. Seal the scent point with HVAC (foil) tape.
5. Make sure the silver button on the top side of the unit is out (so that the fan is switched off).
6. Attach the power adapter into the unit and plug into a 110v outlet. Program the unit to the desired settings and you're ready to start scenting!
7. Change the fan setting on your thermostat to "Always On".

Quick Start

INTELLIGENT FRAGRANCE MACHINE USER MANUAL

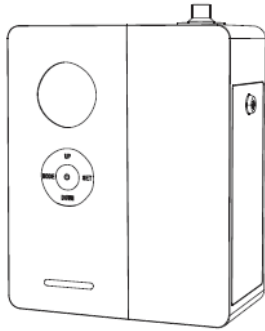


Please read the manual carefully before use and keep it properly


Please read carefully before use and keep it properly.

We supply warranty within 12 months after purchase date for all qualified machines. During warranty, we will offer repair services and the free parts but without essential oil. Pass the warranty period, service with compensation, lifetime maintenance, please read the detail items from the below warranty list.


Operation

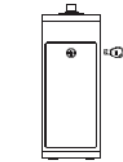

① Use the key unlock the cover.

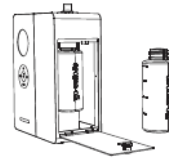

② Spin the oil bottle out clockwise
Install the bottle back to the atomizer head counterclockwise after refill the oil.

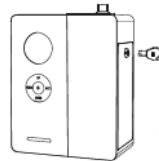


③ Put the oil bottle inside machine and lock with the key.

Packing

Equipment x1, Power Adapter x1, Bottle x1, Key x2, Atomization core x1, User Manual x1

Function Keys

- ① Light on/off, select, Pause Keypad
- ② Work Model, Atomizing frequency, Page keypad
- ③ Time and set keypad
- ④ Up keypad
- ⑤ Down keypad

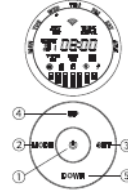

Press MODE 5 seconds to reset the machine and WIFI model. Press Set 5 seconds to lock all keypads, then Press Set 5 seconds again to unlock. Press on/off to pause or start the atomization. Press the on/off 5 seconds to turn on/off the oil level light.

Oil level	>50%	<50%	<25%
Light Color	Green	Blue	Red

Time Setting -24HR and set the Oil consumption parameter

- ① The working time of the equipment is based on local time. Press set to set the clock time, Press Up and down to change the hour, minute and day. E.g: 8:30AM Monday.
- ② Press Set to switch the capacity of oil bottle - Oil level - ML/H consumption parameter, change the parameter by Up and down, then the usage days will be showed in the LCD display.

Working mode and atomizing setting

Press [MODE] and [SET] to Adjust different function, including the local Time, 5 different groups working periods, Work/Pause interval time, aroma concentration.

A. E.g: If you want to set the working time as 8:00AM, Monday. Press Model, the LCD display will show [EVENT 1 ON] means it is the START TIME of first group. Then, press [SET] to do the program setting, Press [UP/DOWN] to adjust the hours, minutes and needed working days group. Press Up and Down when confirm the work days of one week then press ON/OFF keypad. The days with ▲ sign means these days are chosen.

B. After set the start and off time, Press Model again to set the aroma Work/Pause interval time, E.g: Work 10 seconds, Pause 60 seconds.

C. After finish A and B. If continue to set working period, continue to press [MODE] to finish all 4 working groups at the same method.

Aroma concentration

Atomize aroma time can be set: 5S, 10S, 15S, 20S, 25S, 30S, 35S, 40S, 45S, 50S, ...300S. Pause time can be set: 5S, 10S, 15S, 20S, 25S, 30S, 35S, 40S, 45S, 50S, ...300S. The energy column is fluctuating when atomizing.

Equipment Maintenance

If the equipment is not used for a long time, 95% industrial alcohol should be added into the refined oil bottle to clean the nozzle and other parts inside the equipment. Tip: Maintain the equipment with 95% industrial alcohol at least every 1-2 months.

Specific operation: add 95% industrial alcohol into the empty bottle, turn on the equipment and run for 10-15 minutes after, then turn off the equipment and pour the alcohol, then screw back the bottle to machine.

Product Parameter

Size: W182xD92xH250mm

Weight: 2.25kg

Voltage: DC12V


Capacity: 200ml

Power: 8W

Coverage: 300-500m²

Change the Atomization core

The atomization head include: oil bottle, oil suction pipe, filter, atomization core. Take down the oil bottle, remove the atomizing core and pull out the suction pipe, then change the new atomization core and the suction pipe.

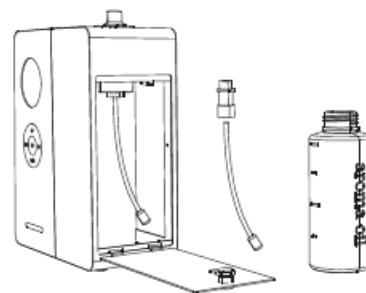

Warranty

DOMAGRON will warrant your diffuser free from any defects for a period of 90 days from purchase. During the warranty period, we will repair or replace your unit.

The following will void any warranty coverage:

- Improper use
- Lack of proper maintenance and cleaning
- Use of unapproved oils

To claim warranty service, contact DOMAGRON for return instructions. Shipping costs are not covered under warranty. No registration is necessary unless purchase from another retailer other than DOMAGRON directly.